
POMONA, assembly instructions

1) Be sure to put the frame in the right position, front marks are little holes near the big ones

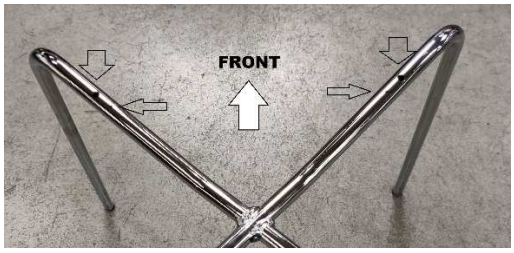

2) Put the plastic chair upside down over a flat surface and then the frame (upside down) over it. The frame can not be fixed in wrong position: if you don’t see the corrispondent hole of the frame over the plastic chair, rotate the frame till it is in the right position
3) Insert the rear two screws but do not tight them



4) Insert and tight the front two screws



5) Tight the rear two screws and the job is done!

